



**MUNDUS PRO**

## Mundus Pro

### Package content

Mundus Pro UV-C Disinfectant Accessories Tray and Fast Wireless Charging Dock | Cable 120 cm (3 ft) | Power adapter with integrated cable 120 cm (3 ft) | User manual.

### Product overview

Thank you for choosing Mundus Pro UV-C Disinfectant Accessories Tray and Fast Qi Wireless Charging Dock from Einova. Two UV-C lamps, four UV-C LEDs, ozone, and titanium dioxide kill 99.99% of surface bacteria and viruses of items placed inside the inner chamber. At the same time, charge up to three devices via two Qi wireless charging spots and one fast 18W USB-A Quick Charge port. Compatible with all Qi-enabled devices. Please read the user manual before using the product.

### How to use

#### 1. UVC Light Smartphone Disinfecter

Two powerful UV-C lamps, four UV-C LEDs, ozone, and titanium dioxide kill 99.99% of viruses and bacteria in one fast 8-minute cycle.

Two powerful UV-C lamps, four UV-C LEDs, ozone, and titanium dioxide kill 99.99% of viruses and bacteria in a single fast cycle.

The spacious inner chamber allows for two smartphones, or one smartphone plus a personal item.

#### 2. Dual Qi Wireless Charger

Two Qi wireless charging spots on the top of the unit let you wirelessly charge two devices at the same time, including iPhone 8 and newer, AirPods, and all other Qi-enabled devices.

#### 3. USB-A Quick Charger

Charge other electronic devices via the USB-A Quick Charge port. Connect your Apple Watch magnetic charging puck or any other USB-A device.

#### 4. Multi Charger and Disinfecter

Use all of the above capabilities simultaneously for powerful multi-device cleaning and charging.

#### 5. Accessories Tray

Mundus Pro is also a convenient place to organize and store your most essential personal items. It's perfect for desks, nightstands, front entryways, and more.

### Quadruple Disinfection

Mundus Pro uses four distinct methods of disinfection that together destroy 99.99% of surface viruses and bacteria. Mundus Pro has been certified by Intertek and the Environmental Protection Agency as a safe and effective surface sterilizer.

1. One UV-C lamp emits UV-C light, tuned to 264nm to hit germicidal peak. The UV-C light works by damaging the microbial DNA.

2. Two UVC-LED lights also emit UV-C light, but of a slightly higher lightwave frequency than the UV-C lamp. Together, the two sources of UV-C light exert maximum light pressure and target a much broader spectrum of surface microbes.

3. The UV-C lamp naturally creates small amounts of human-safe levels of ozone. The ozone molecules destroy the cell wall of surface viruses and bacteria.

4. The inner chamber is covered in titanium dioxide. Titanium dioxide has a catalytic effect UV-C light and ozone, amplifying their efficacy.

### Instructions

1. Connect Mundus Pro to the power adapter and plug into a power outlet.

2. Disinfect your smartphone and other personal items by placing them inside Mundus Pro and closing the lid. The lid will seal automatically thanks to the magnetic closure. Press the touch-sensitive LED light indicator light to begin the 8-minute cleaning cycle. Please see the section LED indicator light below for more information.

3. Wirelessly charge your Qi-enabled devices by simply laying them on the dedicated wireless charging spots located on the lid of the Mundus Pro.

4. Charge any USB-A device by connecting the device's charging cable to the USB-A Quick Charge port.

### Smartphone positioning

Adjust the smartphone position to ensure proper alignment with the charging coil of Mundus Pro, marked by the Qi logo. Direct contact required for wireless charging.

### Note about UV-C light protection

If the top cover is opened before the disinfection cycle is completed, the UV-C lamps and LEDs will turn off automatically and the cycle will be paused until the lid is closed again. Your eyes will always be completely protected from the effects of UV-C light.

## LED indicator light

The touch-sensitive LED indicator light is in the shape of a circle, divided into four quarters that blink according to the completion status of the sterilization cycle. One full sterilization cycle takes 8 minutes to complete.

The LED light remains OFF when simply connected to the power supply.

Press the LED light to begin a sterilization cycle. The first quarter of the circle will begin to blink, signaling that the sterilization cycle has begun.

After 2 minutes: The first quarter of the LED circle will stop blinking and remain steadily ON. The second quarter will begin blinking.

After 4 minutes: Half of the LED circle will remain steadily ON. The third quarter of the circle will begin blinking. At this point, the substantial part of the sterilization cycle is now completed.

After 6 minutes: Three-quarters of the circle will remain steadily ON. The final quarter of the circle will begin blinking.

After 8 minutes: The full LED circle will remain steadily ON, signalling that the sterilization cycle is completed.

The full circle will remain ON until the lid is opened.

Opening the lid mid-cycle will cause the LED light to pause any blinking and remain steady, signaling that the cleaning cycle has been interrupted and is not yet complete.

## Specifications

MUNDUS PRO Dimensions: 19,5 x 19,5 x 5,2 cm (7,6 x 7,6 x 2 in) | Wireless output: 5W, 7,5W, 10W X2 fast charge | Coil: 2 coils, charging two devices at the same time | USB-A output (QC 3.0): 5V 3A, 9V 2A, 12V 1.5A (18W) | Color: White. 12W UV-C: 2x LAMPS + 4x LEDs. CABLE 120 cm (4 ft). POWER ADAPTER Input: AC 100-240V 50-60Hz 1.5A | Output: 20V 3.25A | Integrated cable 120 cm (4 ft).

## Troubleshooting

If the product is not working properly please first check the troubleshooting guide below. If your situation differs from normal conditions, please try to solve the issue or call customer service at 44 (808) 178 7288 Mon-Fri 9am-5pm (GMT). For full troubleshooting visit our website: [www.einova.com/store/support/troubleshooting](http://www.einova.com/store/support/troubleshooting)

Does the power outlet work? (normal conditions: yes)

Are you using the provided power adapter? (normal conditions: yes)

Try charging your smartphone directly with the power adapter using your cable. Does it work? (normal conditions: yes)

Is the cable correctly attached to the adapter? (normal conditions: yes)

Has Mundus Pro been dropped or damaged?(normal conditions: no)

Is your smartphone officially compatible with Qi wireless charging or equipped with a working Qi receiver? (normal conditions: yes)

Is the smartphone correctly aligned with the coil position of Mundus Pro (as shown in the relevant section of the manual)? (normal conditions: yes)

Is there any metal between your smartphone and the charger? (normal conditions: no)

## Safety information

Please read this safety information carefully before using the product to prevent injury to yourself or others and damage to your device.

Please keep this manual for future reference.

Do not damage the charging cable. Doing so may cause electric shock or fire.

Keep the product away from hot surfaces and sharp corners.

Do not carry or drag the product by the cable.

Do not use the product if one or more of its components are damaged or faulty.

Do not look directly at UV light.

Protect eyes & skin from exposure to UV light.

The product contains electronic parts. Keep your device dry. Humidity and liquids may damage the electronic circuits of the device and may cause electric shock and fire.

Handle the product with care. Do not drop your device. It may get damaged or may malfunction.

Do not disassemble, modify, or repair the product. Any alteration or modification of your device may void the manufacturer's warranty. If your device needs servicing, contact the manufacturer.

Do not modify the product in any way. Any modification may increase the risk of injury.

Do not bite or suck on the device. Doing so may damage the device or result in an explosion or fire.

WARNING: CHOKING HAZARD. Keep out of the reach of children.

If you notice strange smells or smoke coming from your device, stop using it immediately. Continuing to use the device

may result in fire or explosion.

Continuous exposure to UV light may cause darkening and yellowing inside the inner chamber, similar to exposure to sunlight after a period of time. This is a normal phenomenon and does not affect the sanitizing performance.

Prolonged exposure to UV light may cause the plastic materials to become discolored or brittle.

Do not use the device for anything other than its intended use. The device may malfunction or may cause an electric shock or fire.

Do not leave a battery on prolonged charge when not in use.

Never dispose of the device in a fire.

Avoid exposing your device to very cold or very hot temperatures. Extreme temperatures may damage the charger and reduce the lifespan of the device.






Do not throw away the product with the household trash. The product needs to be recycled and disposed of responsibly.

## Limited warranty

For product warranty visit our website at the page [www.einova.com/store/support/download-area](http://www.einova.com/store/support/download-area)


This product is meant for use only with appropriate devices. Please consult your device packaging to determine whether this product is compatible with your particular device. Manufacturer will not be responsible for any damages you or any third party that may suffer as a result of use, intended or unintended, or misuse of this product. You agree to indemnify Manufacturer for any resulting injury or damage if the product is used with an unintended device. Product names, logos, brands and other trademarks referred to within this product are property of their respective trademark holders. These trademark holders are not affiliated with our company, our products or our website. They do not sponsor or endorse our materials.



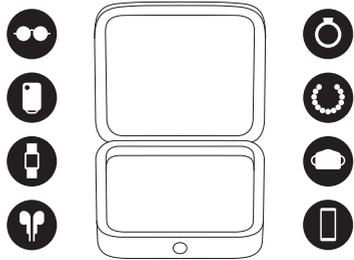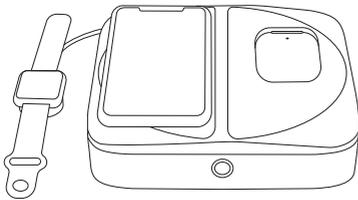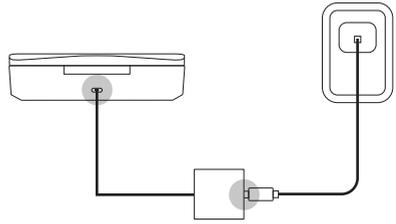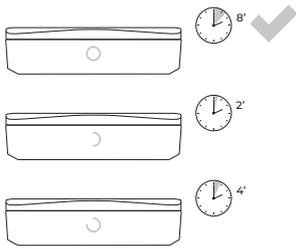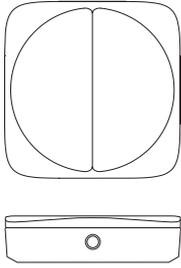



by EGGTRONIC

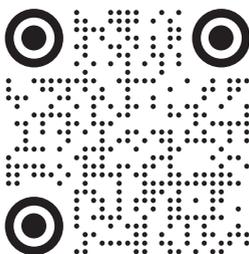

[www.einova.com](http://www.einova.com)  
[support@einova.com](mailto:support@einova.com)